



Dimensions

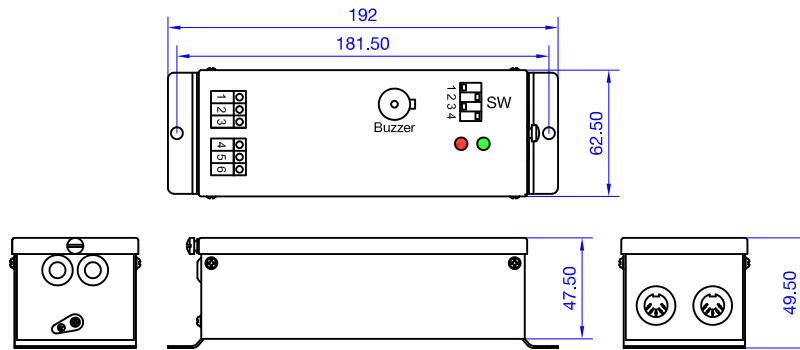

Terminal definitions

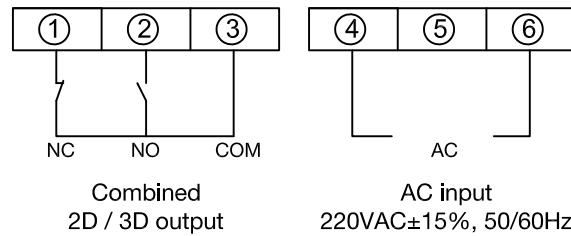

LED indicators and buzzer

Indicators	Red LED	●	ON	Beams obstructed or system fault
	Red LED	○	OFF	Normal
	Green LED	●	ON	Power on
	Green LED	○	OFF	Power off
Buzzer	Beeping	3D configuration is on		

Notes

1. The MD series power supply is factory programmed and will automatically work once the 3D3 series door detectors are affixed to the car door panels, unless there are unusual site or local conditions.
2. The default MD series factory settings are for medium sensitivity and permanent 3D operation. These may be adjusted by consulting section 3.2 of the 3D3 User Manual.
3. Should site conditions require manual setup, please consult section 3.1 of the 3D3 User Manual.